


Alcotest 7110 Calibration Record

Equipment	Alcotest 7110 MKIII-C	Serial No.:	ARTL-0005		
Location:	PLAINSBORO TOWNSHIP PD				
Calibration File No.:	01445	Calib. Date:	02/27/2014	Calib. No.:	00025
Certification File No.:	01397	Cert. Date:	11/05/2013	Cert. No.:	00018
Linearity File No.:	01398	Lin. Date:	11/05/2013	Lin. No.:	00018
Solution File No.:	01441	Soln. Date:	02/15/2014	Soln. No.:	00171
Sequential File No.:	01445	File Date:	02/27/2014		
Calibrating Unit:	WET	Model No.:	CU-34	Serial No.:	DDUF S3-0064
Control Solution %:	0.100%			Expires:	02/13/2015
Solution Control Lot:	13B110			Bottle No.:	1270

Coordinator

Last Name: SNYDER First Name: THOMAS MI: J.
Signature: Sgt. Thomas J. Snyder # 5792 Badge No.: 5792
Date: 02/27/2014

*Black Key Temperature Probe Serial.....# DDUJ P2-003 *(Signature)*
*Digital NIST Temperature Measuring System Serial.....# 130 602 287 *(Signature)*

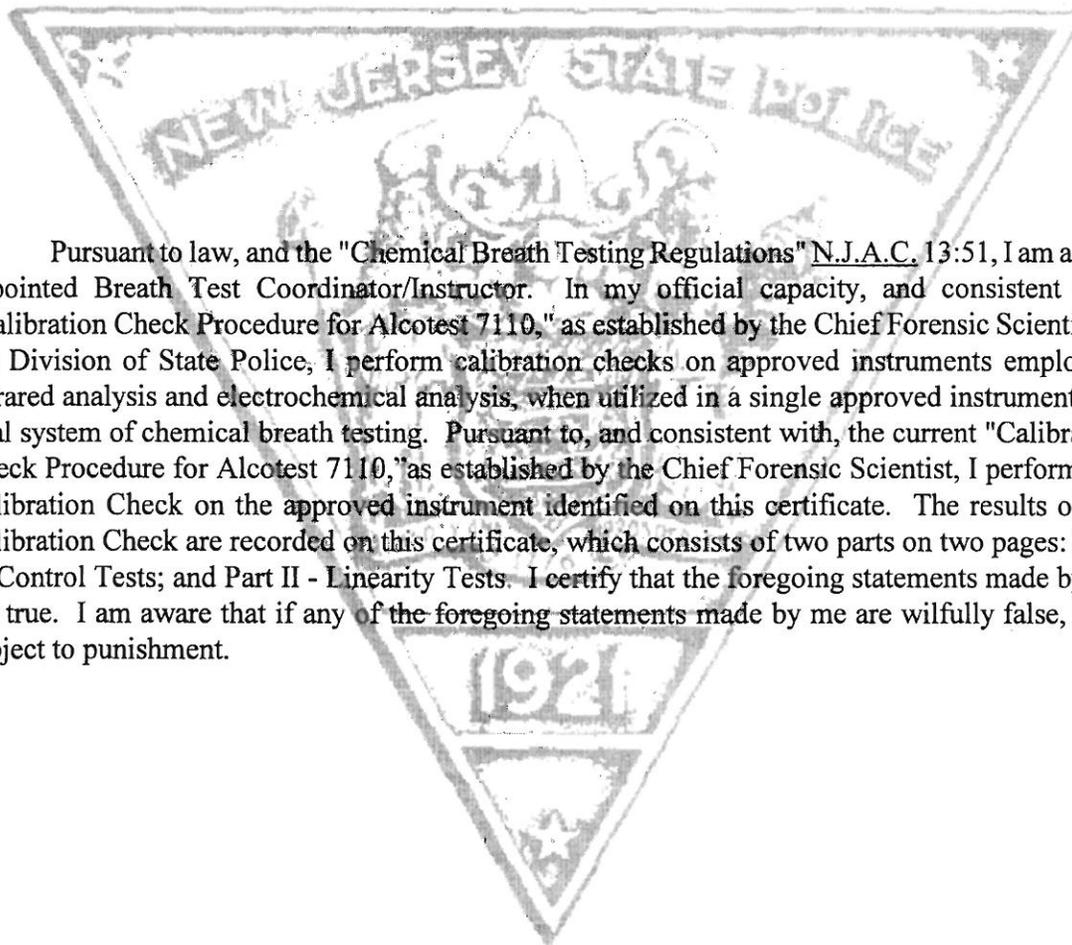

Pursuant to law, and the "Chemical Breath Testing Regulations" N.J.A.C. 13:51, I am a duly appointed Breath Test Coordinator/Instructor. In my official capacity, and consistent with "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist of the Division of State Police, I perform calibration checks on approved instruments employing infrared analysis and electrochemical analysis, when utilized in a single approved instrument as a dual system of chemical breath testing. Pursuant to, and consistent with, the current "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist, I performed a Calibration Check on the approved instrument identified on this certificate. The results of my Calibration Check are recorded on this certificate, which consists of two parts on two pages: Part I - Control Tests; and Part II - Linearity Tests. I certify that the foregoing statements made by me are true. I am aware that if any of the foregoing statements made by me are wilfully false, I am subject to punishment.

Alcotest 7110 Calibration Certificate

Part I - Control Tests

Equipment Alcotest 7110 MKIII-C Serial No.: ARTL-0005
Location: PLAINSBORO TOWNSHIP PD
Calibration File No.: 01445 Calib. Date: 02/27/2014 Calib. No.: 00025
Certification File No.: 01446 Cert. Date: 02/27/2014 Cert. No.: 00019
Linearity File No.: 01398 Lin. Date: 11/05/2013 Lin. No.: 00018
Solution File No.: 01441 Soln. Date: 02/15/2014 Soln. No.: 00171
Sequential File No.: 01446 File Date: 02/27/2014

Calibrating Unit: WET Model No.: CU-34 Serial No.: DDUF S3-0064
Control Solution %: 0.100% Expires: 02/13/2015
Solution Control Lot: 13B110 Bottle No.: 1270

Function	Result %BAC	Time HH:MM	Temperature Simulator (°C)	Comment(s) or Error(s)
Ambient Air Blank	0.000%	08:27S		
Control 1 EC	0.100%	08:27S	34.0°C	*** TEST PASSED ***
Control 1 IR	0.100%	08:27S	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	08:28S		
Control 2 EC	0.097%	08:29S	34.0°C	*** TEST PASSED ***
Control 2 IR	0.099%	08:29S	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	08:29S		
Control 3 EC	0.098%	08:30S	34.0°C	*** TEST PASSED ***
Control 3 IR	0.099%	08:30S	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	08:31S		

All tests within acceptable tolerance.

Coordinator

Last Name: SNYDER

First Name: THOMAS

MI: J.

Signature:

Sgt. Thomas J. Snyder #5792

Badge No.: 5792

Date: 02/27/2014

Pursuant to law, and the "Chemical Breath Testing Regulations" N.J.A.C. 13:51, I am a duly appointed Breath Test Coordinator/Instructor. In my official capacity, and consistent with "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist of the Division of State Police, I perform calibration checks on approved instruments employing infrared analysis and electrochemical analysis, when utilized in a single approved instrument as a dual system of chemical breath testing. Pursuant to, and consistent with, the current "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist, I performed a Calibration Check on the approved instrument identified on this certificate. The results of my Calibration Check are recorded on this certificate, which consists of two parts on two pages: Part I - Control Tests; and Part II - Linearity Tests. I certify that the foregoing statements made by me are true. I am aware that if any of the foregoing statements made by me are wilfully false, I am subject to punishment.

Alcotest 7110 Calibration Certificate

Part II - Linearity Tests

Equipment	Alcotest 7110 MKIII-C	Serial No.: ARTL-0005
Location:	PLAINSBORO TOWNSHIP PD	
Calibration File No.:	01445	Calib. Date: 02/27/2014
Certification File No.:	01446	Calib. No.: 00025
Linearity File No.:	01447	Cert. Date: 02/27/2014
Solution File No.:	01441	Cert. No.: 00019
Sequential File No.:	01447	Lin. Date: 02/27/2014
		Lin. No.: 00019
		Soln. Date: 02/15/2014
		Soln. No.: 00171
		File Date: 02/27/2014
Calibrating Unit:	WET	Model No.: CU-34
Control Solution %:	0.040%	Serial No.: DDRK S3-0003
Solution Control Lot:	12H104	Expires: 08/24/2014
		Bottle No.: 1270
Calibrating Unit:	WET	Model No.: CU-34
Control Solution %:	0.080%	Serial No.: DDXD S3-0184
Solution Control Lot:	12H105	Expires: 08/27/2014
		Bottle No.: 1270
Calibrating Unit:	WET	Model No.: CU-34
Control Solution %:	0.160%	Serial No.: DDSC S3-0009
Solution Control Lot:	12I106	Expires: 09/10/2014
		Bottle No.: 1270

Function	Result	Time	Temperature	Comment(s)
	%BAC	HH:MM	Simulator (°C)	or Error(s)
Ambient Air Blank	0.000%	08:45S		
Control 1 EC	0.042%	08:46S	34.0°C	*** TEST PASSED ***
Control 1 IR	0.039%	08:46S	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	08:47S		
Control 2 EC	0.040%	08:48S	34.0°C	*** TEST PASSED ***
Control 2 IR	0.040%	08:48S	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	08:50S		
Control 3 EC	0.081%	08:50S	34.0°C	*** TEST PASSED ***
Control 3 IR	0.079%	08:50S	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	08:52S		
Control 4 EC	0.079%	08:53S	34.0°C	*** TEST PASSED ***
Control 4 IR	0.079%	08:53S	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	08:54S		
Control 5 EC	0.157%	08:55S	34.0°C	*** TEST PASSED ***
Control 5 IR	0.154%	08:55S	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	08:56S		
Control 6 EC	0.156%	08:57S	34.0°C	*** TEST PASSED ***
Control 6 IR	0.155%	08:57S	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	08:59S		

All tests within acceptable tolerance.

Coordinator

Last Name: SNYDER

First Name: THOMAS

MI: J.

Signature: Sgt. Thomas J. Snyder #5792

Badge No.: 5792

Date: 02/27/2014



Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.

(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

- Model: ALCOTEST® CU34
- Model: MARK IIA
- Other: _____

Serial Number:

DDRK S3-0003

Certification Date

Technician

Re-Certification Due Date

1-23-14

BC

1-23-15



Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.

(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

- Model: ALCOTEST® CU34
- Model: MARK IIA
- Other: _____

Serial Number:

DDSC S3-0009

Certification Date

Technician

Re-Certification Due Date

1-23-14

BC

1-23-15



Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.
(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

- Model: ALCOTEST® CU34
- Model: MARK IIA
- Other: _____

Serial Number:

DDX1D53-0184

Certification Date

Technician

Re-Certification Due Date

1-24-14

BC

1-24-15

Dräger

ALCOTEST® 7110 TEMPERATURE PROBE

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest® 7110 Temperature Probe has been tested for accuracy with instrumentation that is traceable to the National Institute of Standards and Technology (NIST). The manufacturer recommends accuracy verification of the Temperature Probe within 12 months of the certification date below, or sooner, according to your State Specification. For accurate temperature readings, the probe value on this certificate, noted below, must be programmed into the Alcotest® 7110.

Serial Number Temp. Probe

Certification date:

Next Certification due:

DDUS P2-003

1-21-14

1-21-15

Probe Value

100

Draeger Safety Diagnostics, Inc.
Technical Service Department

BC



Calibration
Certificate No. 1750.01

Calibration complies with ISO/IEC
17025, ANSI/NCSL Z540-1, and 9001



Cert. No.: 4000-5427031

Traceable® Certificate of Calibration for Digital Thermometer

Manufactured for and distributed by: VWR International, LLC, Radnor Corporate Center, Bldg 1, Ste 200, 100 Matsonford Road, Radnor, PA 19087

Instrument Identification:

Model: 61220-601 S/N: 130602287 Manufacturer: Control Company

Standards/Equipment:

Description	Serial Number	Due Date	NIST Traceable Reference
Temperature Calibration Bath TC-179	A45240		
Thermistor Module	A17118	2/13/14	1000332071
Temperature Probe	128	2/20/14	6-B48Z9-30-1
Temperature Calibration Bath TC-231	A79341		
Thermistor Module	A17118	2/13/14	1000332071
Temperature Probe	3039	2/20/14	6-B48Z9-1-1
Temperature Calibration Bath TC-218	A73332		
Thermistor Module	A27129	11/09/13	1000327261
Temperature Probe	5202	11/30/14	15-B15PW-1-1
Temperature Calibration Bath TC-275	B16388		
Digital Thermometer	B16815	8/12/14	1000341967
PRT Temperature Probe	02022	8/14/15	B3812004

Certificate Information:

Technician: 68 Procedure: CAL-06 Cal Date: 10/08/13 Cal Due: 10/08/15
Test Conditions: 24.0°C 37.0 %RH 1017 mBar

Calibration Data: (New Instrument)

Unit(s)	Nominal	As Found	In Tol	Nominal	As Left	In Tol	Min	Max	±U	TUR
°C		N.A.		-0.001	0.001	Y	-0.051	0.049	0.013	3.8:1
°C		N.A.		25.001	25.001	Y	24.951	25.051	0.023	2.2:1
°C		N.A.		50.003	50.000	Y	49.953	50.053	0.014	3.6:1
°C		N.A.		100.001	100.003	Y	99.951	100.051	0.018	2.8:1

This Instrument was calibrated using Instruments Traceable to National Institute of Standards and Technology.

A Test Uncertainty Ratio of at least 4:1 is maintained unless otherwise stated and is calculated using the expanded measurement uncertainty. Uncertainty evaluation includes the instrument under test and is calculated in accordance with the ISO "Guide to the Expression of Uncertainty in Measurement" (GUM). The uncertainty represents an expanded uncertainty using a coverage factor k=2 to approximate a 95% confidence level. In tolerance conditions are based on test results falling within specified limits with no reduction by the uncertainty of the measurement. The results contained herein relate only to the item calibrated. This certificate shall not be reproduced except in full, without written approval of Control Company.

Nominal=Standard's Reading; As Left=Instrument's Reading; In Tol=In Tolerance; Min/Max=Acceptance Range; ±U=Expanded Measurement Uncertainty; TUR=Test Uncertainty Ratio; Accuracy=±(Max-Min)/2; Min = As Left Nominal(Rounded) - Tolerance; Max = As Left Nominal(Rounded) + Tolerance; Date=MM/DD/YY

Nicol Rodriguez
Nicol Rodriguez, Quality Manager

Aaron Justice
Aaron Justice, Technical Manager

Maintaining Accuracy:

In our opinion once calibrated your Digital Thermometer should maintain its accuracy. There is no exact way to determine how long calibration will be maintained. Digital Thermometers change little, if any at all, but can be affected by aging, temperature, shock, and contamination.

Recalibration:

For factory calibration and re-certification traceable to National Institute of Standards and Technology contact Control Company.

CONTROL COMPANY 4455 Rex Road Friendswood, TX 77546 USA
Phone 281 482-1714 Fax 281 482-9448 service@control3.com www.control3.com

Control Company is an ISO 17025:2005 Calibration Laboratory Accredited by (A2LA) American Association for Laboratory Accreditation, Certificate No. 1750.01.
Control Company is ISO 9001:2008 Quality Certified by (DNV) Det Norske Veritas, Certificate No. CERT-01805-2006-AQ-HOU-RVA.
International Laboratory Accreditation Cooperation (ILAC) - Multilateral Recognition Arrangement (MRA).



State of New Jersey
 OFFICE OF THE ATTORNEY GENERAL
 DEPARTMENT OF LAW AND PUBLIC SAFETY
 DIVISION OF STATE POLICE
 POST OFFICE BOX 7068
 WEST TRENTON, NJ 08628-0068
 (609) 882-2000

CHRIS CHRISTIE
 Governor

JEFFREY S. CHIESA
 Attorney General

KIM GUADAGNO
 Lt. Governor

COLONEL JOSEPH R. FUENTES
 Superintendent

CERTIFICATION OF ANALYSIS
0.10 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.1174 to 0.1246 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.

ANALYSIS DATE: 3/6/2013

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 13B110

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.1234 to 0.1241 grams per 100 milliliters of solution.


This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is February 13, 2015.

As Research Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Ali M. Alaoui, Ph.D.
 Research Scientist
 NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 7th day of March, 2013.

Linda R. DeFuentes
 Notary

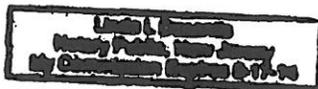

"An Internationally Accredited Agency"

New Jersey Is An Equal Opportunity Employer
 Printed on Recycled Paper and Recyclable





State of New Jersey

OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON, NJ 08628-0068
(609) 882-2000

CHRIS CHRISTIE
Governor

KIM GUADAGNO
Lt. Governor

JEFFREY S. CHIESA
Attorney General

COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.04 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.0469 to 0.0499 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.

ANALYSIS DATE: 9/26/2012

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 12H104

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.0487 to 0.0491 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is August 24, 2014.


As Research Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

[Handwritten signature of Ali M. Alaoui]

Ali M. Alaoui, Ph.D.
Research Scientist
NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 5th day of October, 2012.

[Handwritten signature of Linda L. DeFantis]
Notary

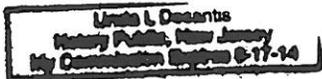

"An Internationally Accredited Agency"

New Jersey Is An Equal Opportunity Employer
Printed on Recycled Paper and Recyclable





State of New Jersey

OFFICE OF THE ATTORNEY GENERAL

DEPARTMENT OF LAW AND PUBLIC SAFETY

DIVISION OF STATE POLICE

POST OFFICE BOX 7068

WEST TRENTON, NJ 08628-0068

(609) 882-2000

CHRIS CHRISTIE
Governor

KIM GUADAGNO
Lt. Governor

JEFFREY S. CHIESA
Attorney General

COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.08 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.0939 to 0.0997 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.

ANALYSIS DATE: 9/27/2012

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 12H105

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.0967 to 0.0976 grams per 100 milliliters of solution.


This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is August 27, 2014.

As Research Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Ali M. Alaoui, Ph.D.
Research Scientist
NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 5th day of October, 2012.

Notary

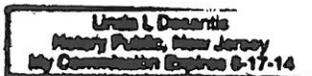

"An Internationally Accredited Agency"

New Jersey Is An Equal Opportunity Employer
Printed on Recycled Paper and Recyclable





State of New Jersey

OFFICE OF THE ATTORNEY GENERAL

DEPARTMENT OF LAW AND PUBLIC SAFETY

DIVISION OF STATE POLICE

POST OFFICE BOX 7068

WEST TRENTON, NJ 08628-0068

(609) 882-2000

CHRIS CHRISTIE

Governor

KIM GUADAGNO

Lt. Governor

JEFFREY S. CHIESA

Attorney General

COLONEL JOSEPH R. FUENTES

Superintendent

CERTIFICATION OF ANALYSIS
0.16 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.1878 to 0.1994 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.

ANALYSIS DATE: 10/2/2012

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 12I106

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.1922 to 0.1932 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is September 10, 2014.

As Research Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

[Handwritten signature of Ali M. Alaouie]

Ali M. Alaouie, Ph.D.
Research Scientist
NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 5th day of October, 2012.

[Handwritten signature of Notary]
Notary



"An Internationally Accredited Agency"

New Jersey Is An Equal Opportunity Employer
Printed on Recycled Paper and Recyclable





State of New Jersey

OFFICE OF THE ATTORNEY GENERAL

DEPARTMENT OF LAW AND PUBLIC SAFETY

DIVISION OF STATE POLICE

POST OFFICE BOX 7068

WEST TRENTON, NJ 08628-0068

(609) 882-2000

CHRIS CHRISTIE
Governor

KIM GUADAGNO
Lt. Governor

JEFFREY S. CHIESA
Attorney General

COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.10 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.1174 to 0.1246 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.

ANALYSIS DATE: 10/3/2012

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 12H107

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.1211 to 0.1218 grams per 100 milliliters of solution.


This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is September 13, 2014.

As Research Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Ali M. Alaouie, Ph.D.
Research Scientist
NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 5th day of October, 2012.

Notary

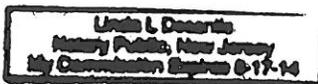

"An Internationally Accredited Agency"

New Jersey Is An Equal Opportunity Employer
Printed on Recycled Paper and Recyclable



DEPARTMENT OF
Law and Public Safety
This is to certify that

Thomas J. Snyder
Breath Test Coordinator/Instructor

IS QUALIFIED AND COMPETENT TO CONDUCT CHEMICAL BREATH ANALYSES PURSUANT TO CHAPTER 142 OF THE LAWS OF 1966 IN THE OPERATION OF THE **Alcotest 7110 MKIII-C**
A METHOD TO DETERMINE INTOXICATION.
GIVEN UNDER MY HAND AT TRENTON, NEW JERSEY THIS 17th DAY OF June
TWO THOUSAND AND SIX

[Signature]
SUPERINTENDENT
NEW JERSEY STATE POLICE

[Signature]
ATTORNEY GENERAL
STATE OF NEW JERSEY

ORIGINAL COURSE DATES

DATE	Refresher Course PLACE	INSTRUCTOR
03/27/08	SUSSEX F.A.	M. Russo
1/4/10	OCPA	Odonna Stanke
12-17-12	CCPA	Wm Linn
4.		
5.		
6.		
7.		
8.		
9.		

S.P. 293B (Rev. 01/08)

DEPARTMENT OF
Law and Public Safety
This is to certify that

Thomas J. Snyder
New Jersey State Police

IS QUALIFIED AND COMPETENT TO CONDUCT CHEMICAL BREATH ANALYSES PURSUANT TO CHAPTER 142 OF THE LAWS OF 1966 IN THE OPERATION OF THE **ALCOTEST 7110 MKIII-C**
A METHOD TO DETERMINE INTOXICATION.
GIVEN UNDER MY HAND AT TRENTON, NEW JERSEY THIS 22nd DAY OF February
TWO THOUSAND AND SIX

[Signature]
SUPERINTENDENT
NEW JERSEY STATE POLICE

[Signature]
ATTORNEY GENERAL
STATE OF NEW JERSEY

ORIGINAL COURSE DATES

DATE	Refresher Course PLACE	INSTRUCTOR
03/27/08	SUSSEX F.A.	M. Russo
1/4/10	OCPA	Odonna Stanke
12-17-12	CCPA	Wm Linn
4.		
5.		
6.		
7.		
8.		
9.		

S.P. 293B (Rev. 01/08)

DEPARTMENT OF
Law and Public Safety
This is to certify that

Thomas J. Snyder
New Jersey State Police

IS QUALIFIED AND COMPETENT TO CONDUCT CHEMICAL BREATH ANALYSES PURSUANT TO CHAPTER 142 OF THE LAWS OF 1966 IN THE OPERATION OF THE **Breathalyzer**
A METHOD TO DETERMINE INTOXICATION.
GIVEN UNDER MY HAND AT TRENTON, NEW JERSEY THIS 11th DAY OF Aug.
TWO THOUSAND AND 00

[Signature]
SUPERINTENDENT
NEW JERSEY STATE POLICE

[Signature]
ATTORNEY GENERAL
STATE OF NEW JERSEY

ORIGINAL COURSE DATES

DATE	Refresher Course PLACE	INSTRUCTOR
11-14-01	ACTC	M. J. Jagan
5-5-03	OCPA	A. Jagan
4-4-05	ACTC	C. V. Jagan
7-26-07	OCPA	C. Stanke
5.		
6.		
7.		
8.		
9.		

SP-293B (Rev. 11/99)

Dräger

Alcotest® 7110 MKIII-C

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest 7110 MKIII-C has been tested for accuracy and found to be in compliance with the National Highway Traffic Safety Administration Standard for evidential breath testing devices. The Alcotest MKIII-C is compliant as a "mobile" and "nonmobile" EBT with 49 FR 48854, 49 FR 48864 and 58 FR 48705. The manufacturer recommends accuracy verification of this instrument within 12 months of the calibration date below, or sooner, according to your State Specifications.

Certification Date:

5-12-2011

SERIAL NUMBER:

ARTL-0005

Dräger Safety Diagnostics, Inc.

AS



Dräger

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.
(F.R. Vol. 59 No. 249 12/19/94 Notices)

Draeger Safety Diagnostics, Inc.

- Model: ALCOTEST® CU34
- Model: MARK IIA
- Other: _____

Serial Number:

DDUF 53-0064

Certification Date

10-7-13

Technician

BC

Re-Certification Due Date

10-7-14

Dräger

ALCOTEST® 7110 TEMPERATURE PROBE

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest® 7110 Temperature Probe has been tested for accuracy with instrumentation that is traceable to the National Institute of Standards and Technology (NIST).

The manufacturer recommends accuracy verification of the Temperature Probe within 12 months of the certification date below, or sooner, according to your State Specification.

For accurate temperature readings, the probe value on this certificate, noted below, must be programmed into the Alcotest® 7110.

Serial Number Temp. Probe

DDSF P2-0396

Certification date:

10-7-13

Next Certification due:

10-7-14

Probe Value

105

Draeger Safety Diagnostics, Inc.
Technical Service Department

BC

NEW JERSEY STATE POLICE
Alcohol Drug Testing Unit
Contact Sheet

Fax Sheet To: (609)584-9359 / Attention: Sgt. Thomas J. Snyder #5792

OR

Email Information To: LPP5792@GW.NJSP.ORG

Police Department Information

Municipal Court Information

Department Name : Plainsboro Township
County : Middlesex
Department Phone : _____
Primary Contact : _____
Phone Number : _____
Email Address : _____
Cell Number : _____
Fax Number : _____
Secondary Contact : _____
Phone Number : _____
Email Address : _____
Cell Number : _____
Fax Number : _____

Court Phone Number : _____
Court Administrator : _____
Phone Number : _____
Email Address : _____
Fax Number : _____
Prosecutor 1 : _____
Business Phone : _____
Email Address : _____
Fax Number : _____
Cell Number : _____
Prosecutor 2 : _____
Business Phone : _____
Email Address : _____
Fax Number : _____
Cell Number : _____

Records Department Information

Discovery Contact : _____
Phone Number : _____
Email Address : _____
Fax Number : _____

Prosecutor 3 : _____
Business Phone : _____
Email Address : _____
Fax Number : _____
Cell Number : _____



State of New Jersey

OFFICE OF THE ATTORNEY GENERAL

DEPARTMENT OF LAW AND PUBLIC SAFETY

DIVISION OF STATE POLICE

POST OFFICE BOX 7068

WEST TRENTON, NJ 08628-0068

(609) 882-2000

CHRIS CHRISTIE
Governor

KIM GUADAGNO
Lt. Governor

JOHN J. HOFFMAN
Acting Attorney General

COLONEL JOSEPH R. FUENTES
Superintendent

CERTIFICATION OF ANALYSIS
0.10 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.1174 to 0.1246 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.

ANALYSIS DATE: 2/18/2014

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 14A126

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.1196 to 0.1208 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is January 6, 2016.

As Research Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Ali M. Alaoui, Ph.D.
Research Scientist
NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 19th day of February, 2014.

Notary

Linda L. Desantis
Notary Public, New Jersey
My Commission Expires 8-17-14



"An Internationally Accredited Agency"

New Jersey Is An Equal Opportunity Employer
Printed on Recycled Paper and Recyclable

